

Insert the supplied M5 security bolt into the hole you just created to prevent the sensor holder from rotating



SUPPORT ASSEMBLY

Assemble the A1211 sensor holders as shown:



Position the sensor to monitor the REAR HOLDER ASSEMBLY temperature of the desired area of the tyre. Install the sensor approximately 3-4 cm from



FRONT HOLDER ASSEMBLY

Fit the front holder by positioning the front fixing plate under the wheel spindle so as not to alter the geometry of the set-up



Using the holes in the spindle as a guide, drill

the front holder bracket using a 5.5mm metal



Fix the rear sensor holder to the go-kart frame on the rear tube where the side pod frame is fitted

Right Front Holder

Right Rear Holder



Position the sensor to monitor the temperature of the desired area of the tyre. Install the sensor approximately 3-4 cm from the tyre surface

The A1211 sensor has a conical view with a 55° aperture If the sensor is placed 3 cm from the tyre surface, the temperature of a 3 cm wide

section of the tyre is monitored. If the sensor

is placed 4 cm from the tyre surface, the monitored area is 4 cm wide

The A1211 sensor can detect temperatures up to 150°C / 302°F with a sensitivity of 1°C / 2°F

WARNING

In some extreme cases, signals from rear sensors can be shielded by the radiator or

However, the shielding is never permanent and at most a few consecutive pulses may be missed







10